

CEILING WHEELCHAIR LIFT RL60



The space-saving
wheelchair lift for your stairwell



Stylish solution with the rail fitted underneath the stairs




Leaving the parking station



RL60 – the solution for getting up and down the stairs in a wheelchair

The wheelchair ceiling lift makes you completely independent and mobile. The solid construction to the highest safety standards ensures you have a smooth ride from one floor to the next. The points for getting on and off the lift can be adapted to the specific situation.

The ergonomic controls and customisation enable the wheelchair to be picked up and the lift operated with just a few simple hand movements.

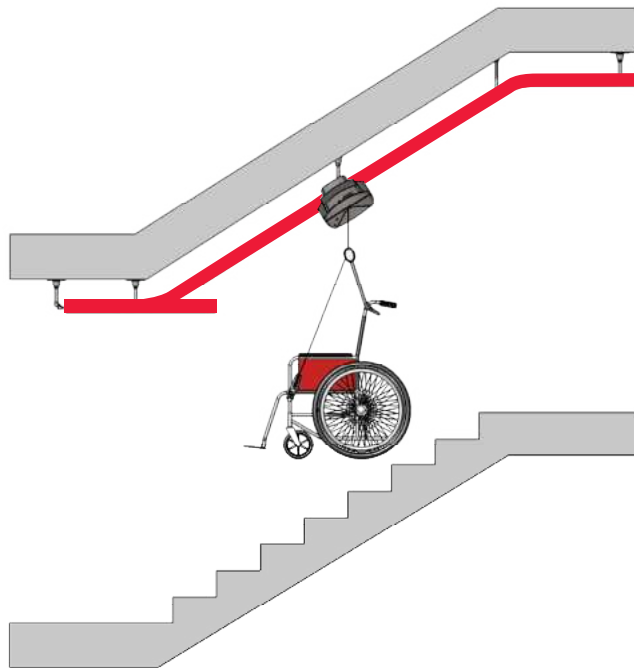

Mounting on concrete or wooden ceilings



Front attachment to the wheelchair



Attach seat belt



Simple and safe operation

Simple installation

The RL60 can be installed anywhere – even in narrow and steep staircases. With careful planning, the rail can even be directed through doorways. The drive system is state-of-the-art technology and guarantees long-lasting safety.

Optional platform

The platform is attached directly to the lifting straps. You move onto the platform in your wheelchair and use the belt to strap yourself in.



Rear attachment to the wheelchair is achieved by reversing in with the wheelchair, while front attachment is achieved by adapting the brackets, with no force required

Lift rail passes through door opening



Manual control (optional)



Cordless call and transmission point



Main advantages of the Högg RL60



- The width of the stairs is not affected
- No physical effort needed to attach the seat lift
- You can choose any location for the parking station
- The lift system can be as long as you need
- The seat lift can be installed anywhere, even in narrow and steep staircases
- A non-obstructive parking station
- Flexible manual operation
- Easy passage through doors can be easily ensured
- Ideal for multi-family-house
- Nominal load 160 kg (optional 250 kg)
- Minimum stair width 810 mm



Lift in the parking position



Short delivery times
through in-house production at Högg




TECHNICAL DATA

RL60

Manufacturer:	Högg Liftsysteme AG, Switzerland
Nominal load:	160 kg, optional 250 kg
Controls:	Key-operated switch Hold button (push button) Emergency stop
Drive system:	37 V AC / pinion on chain
Rail:	aluminium rail 50 x 65 mm
Electrical connection:	230 V AC Fuse 13 A
Speed:	0.12–0.15 m/s
Technical conformity:	CE/TÜV approved
Area of application:	inclines from 0° (horizontal) to 60°
Standard design:	incl. wheelchair suspension arm with personal safety features
Options:	<ul style="list-style-type: none"> – Cordless call and transmission points – Specially developed suspension system – Platform – Special applications – Conversion to SL60 seat lift is possible

(Subject to changes)

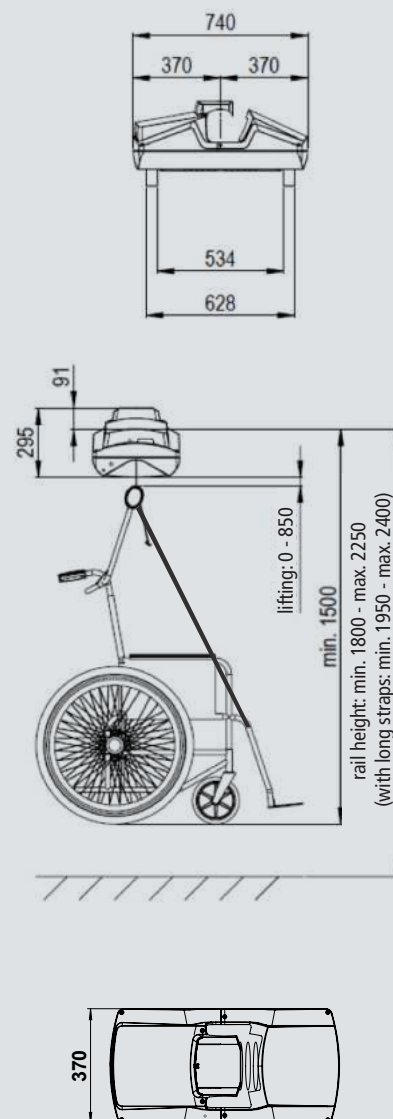

St. Gallen

Högg Liftsysteme AG
Wilerstrasse 137
9620 Lichtensteig
T 071 987 66 80
info@hoegglift.ch

Bern

Högg Liftsysteme AG
Glättmühleweg 22
3613 Steffisburg
T 033 439 41 41
bern@hoegglift.ch

Lausanne

Högg Liftsysteme SA
Route de Bellevue 7
1029 Villars-Ste-Croix
T 021 800 06 91
lausanne@hoegglift.ch



Scan me:

for more product
information, videos
and photo gallery.